

3216270

3216271

For indoor use only.

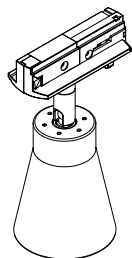
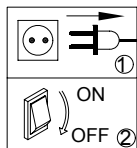


FIG-1


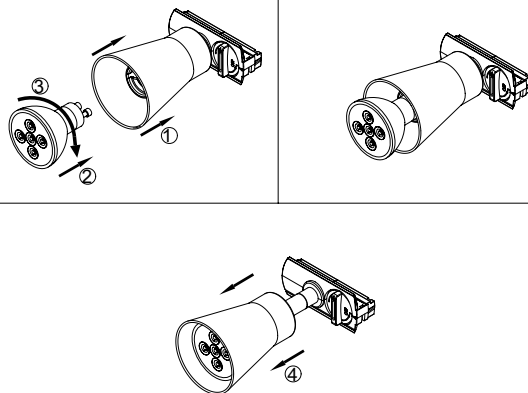


FIG-2

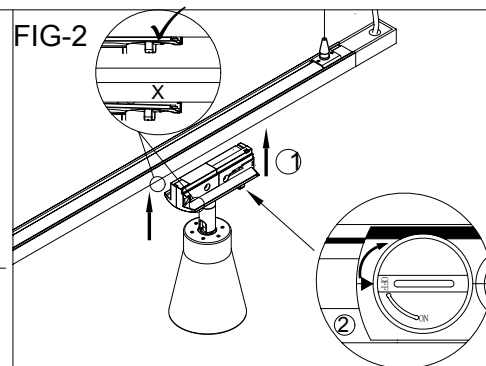

Switch to "OFF" aligned with the "►" at first, put the adaptor into the track.
Then turn the knob to the position which "ON" aligned with the "►".

FIG-3

Please make sure that the "Groove" on the section of track lines up with the "Groove" on the track adaptor - failure to do so can potentially damage the track adaptor and void any warranty.




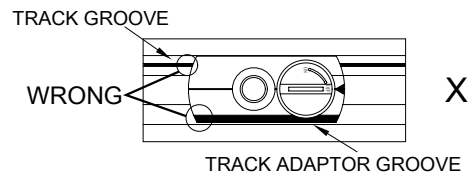



FIG-4

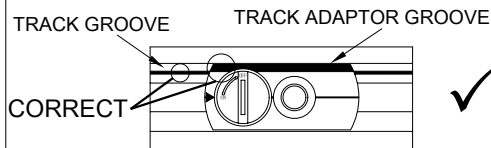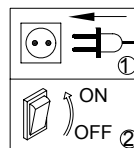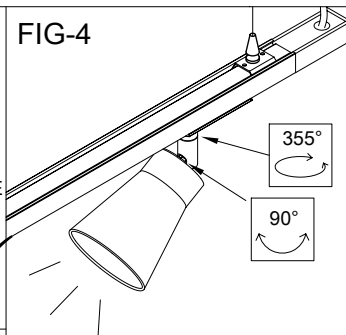

PS: Step for Removing Luminaires

Turn the knob to the position which "OFF" aligned with the "►".

1.

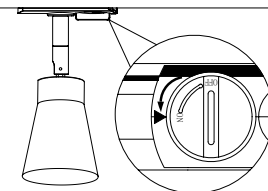

Take off the Adaptor from the track slantingly.

2.

